
AC3LF-01

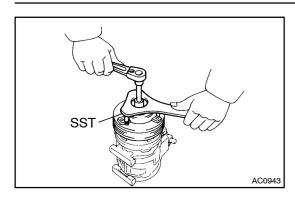


DISASSEMBLY

DISASSEMBLE MAGNETIC CLUTCH


- (a) Remove the pressure plate.
 - (1) Using SST and a socket wrench, remove the shaft bolt.

SST 07112-76060

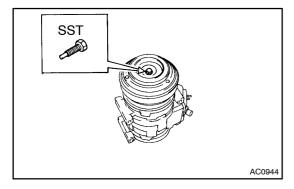


(2) Install SST on the pressure plate.

SST 07112-66040

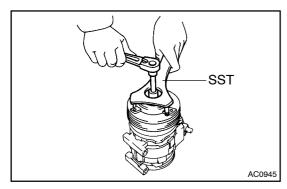


(3) Using SST and a socket wrench, remove the pressure plate.


SST 07112-66040, 07112-76060

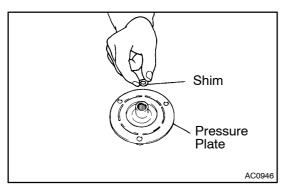

(4) Remove the shims from the pressure plate.

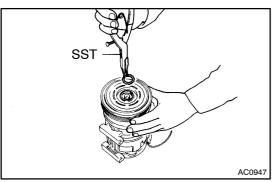


- (b) Remove the rotor.
 - (1) Remove the snap ring.

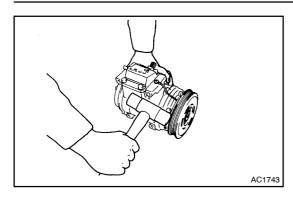


(2) Using a plastic hammer, tap the rotor off the shaft. **NOTICE:**


Be careful not to damage the pulley when tapping on the rotor.

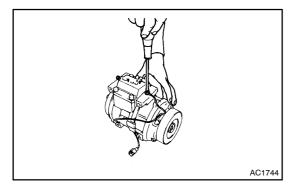

- (c) Remove the stator.
 - Disconnect the stator lead wire from the compressor.

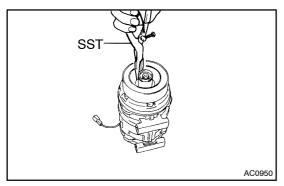

(2) Remove the snap ring.

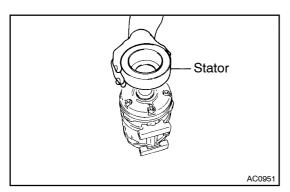

(3) Remove the stator.